

drum carder


carding | product code ADCF/ADCC

Card and blend fibres and colours quickly and efficiently. This new, improved model has two ratios for even more flexibility and control when carding and blending.

Use the 6:1 ratio to prepare your fleece. The controlled intake and carding will produce a smooth even batt ready for blending, spinning or felting. Use the 4:1 ratio to blend sliver, colours and different fibre types consistently into an open and airy batt. Adjustable drum clearance - allows you to set the teeth distance for total control of your fibre. All nylon bearings ensure it is light and easy to turn. The card cloth has wire teeth with a special protective coating and a flexible rubber backing for long life. The carder is strong and robust with the body made from Silver Beech hardwood. The carder has rubber feet to prevent it slipping. Card 50gm (2oz) batt quickly and efficiently. It comes assembled and lacquered ready to use. The new nylon knob makes it quick and easy to remove the handle for transport and storage.



*Drum Carder Packer Brush

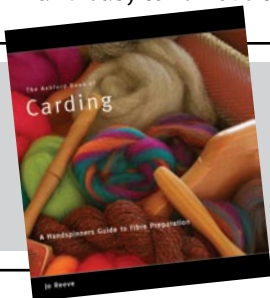

The Ashford Book of Carding - by Jo Reeve

This is a practical and inspirational guide to carding fleece, slivers and exotic fibres. Written for the hand spinner and felter, and everyone who loves fibre, there are sections on using flick, hand and drum carders, fibre and colour blending, colour theory and four innovative projects. Step by step instructions and full colour photographs envelope you in a world of colour, texture and the endless possibilities of fibre.

Models

- Fine 72 point for finer wools and exotic fibres.
- Coarse 36 point for stronger wools or fibre with more vegetable matter to remove.

Specifications

Batt size	55x23cm (22x9ins)
Drum capacity	50gm (2oz)
Ratios	4:1, 6:1
Weight	5kg (11lb)
Timber	Lacquered Silver Beech hardwood

Included accessories

- Awl/doffer – for removing the batt
- Clamps – 2 clamps to secure to a table
- Instructions

Optional accessories available

- Packer Brush – control and pack more fibres onto the large drum
- Cleaning Brush – to remove fibres from carder

Maintenance

The best way to clean the drum carder is with warm soapy water. Wash the carder teeth carefully with an old toothbrush and some mineral turpentine. You should also check to see if there are any fibers wrapped

around the shafts. If possible remove them with a fine hook or needle, however it may be necessary to disassemble the carder as follows:

1. Remove the dome nut or knob, then unscrew the handle.
2. Remove the 5 screws holding the handle side of the drum carder on.
3. Slide both drums about 1cm (1/2ins) along the shafts or sufficient to use a hook to remove any tangled fibres.
4. Slide the drums back into position checking the drive pins engage in the slots in the drums.
5. Reattach the side and handle.
6. Check the clearance between the teeth.



Spinning and Weaving the Ashford way DVD or Video. Assembly, spinning, plying, carding, warping and weaving.

Ashford Handicrafts Limited
415 West Street, Ashburton, New Zealand
Telephone +64 3 308 9087 Facsimile +64 3 308 8664
Email: sales@ashford.co.nz Internet: www.ashford.co.nz

ashford
WHEELS & LOOMS